

USER MANUAL (English)

VIDEO DOOR PHONE SYSTEM

Item No. : 13535



The design and specifications can be changed without notice to users.
Copyright of this manual is reserved.


Version 2.0.1.2.02.10

ENTRY VUE
video intercom systems


CONTENTS

1. Parts and Functions	1
2. Monitor Mounting	1
3. Operation Instructions	3
4. Basic Setup Instructions	4
5. Built-in Memory and SD Card	7
6. Specifications	9

1. Parts and Functions

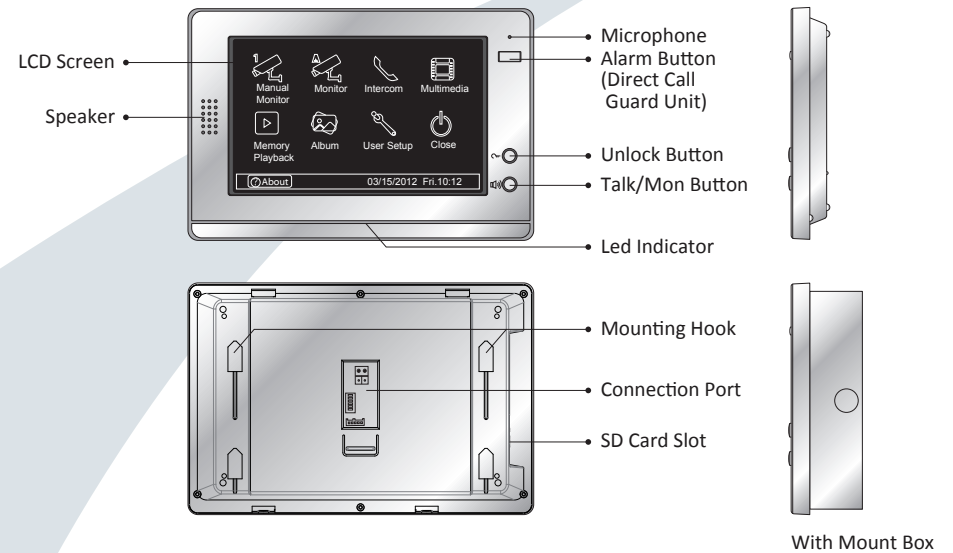

2. Monitor Mounting

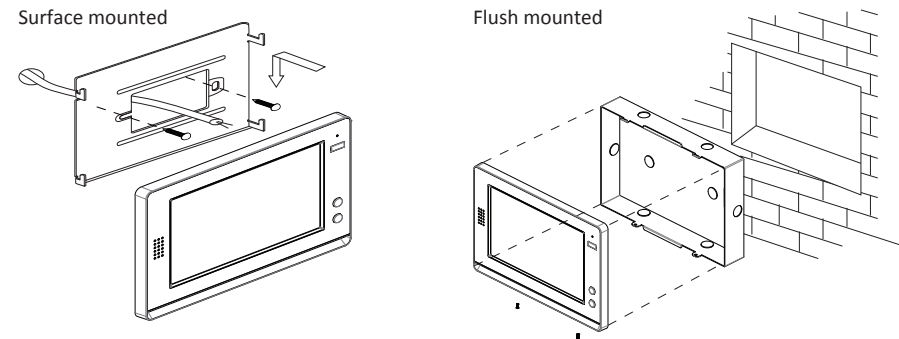

- Use the screws to fix the Mounting Bracket on the wall.
- Connect the system correctly, then hang the Monitor on the Mounting Bracket firmly.
- Dig a hole on the wall with dimension of 205*305*32mm.
- Connect the system correctly, then put the mounting box into the hole, use screws to fix the cover on the mounting box.

3. Operation Instructions

How to Enter Main Menu

The Home screen is your starting point for using all the applications on your monitor. You can customize your Home screen to display your logo.

- Touch the screen anywhere in standby mode, a full screen calendar will be shown.
- Touch the screen again to enter main menu.



Answering a Door Call

- Press CALL button on door station. The monitor rings, and the visitor's image will be seen on screen. If nobody answers the call, the screen will turn off in 30 seconds automatically.

- Press TALK/MON Button or touch icon, you can talk to the visitor for 90 seconds. During talking, press TALK/MON Button again or press icon again to end the conversation. If the system connects two or more Monitors, pick up any Monitor, the others will automatically shut off.



Door Release

- During the conversation, press UNLOCK Button or touch icon to unlock the door. (if two locks are connected to door camera, touch **unlock 2nd** icon to release the second lock)

Entrance Monitoring

- Press TALK/MON button on monitor in standby mode, or touch Monitor icon on main menu. The screen will display the view of the Outdoor Station. During monitoring, touch Manual Monitor icon to get into the camera switching mode, (or directly touch Manual Monitor icon on main menu page). If multi Door Stations are installed, you can press the camera 1/2/3/4 to monitor the Door Station or CCTV camera you want. Press Home icon to exit and enter main menu page.



Intercom Function




- Intercom Call by namelist : User in one apartment can call other apartments in the system. Touch Intercom item on main menu page, then touch Intercom by Namelist icon (the namelist will be created automatically by the system). Select a name on the screen then touch Dial Number icon to call. Press icon to enter last/next name list page. (Touch Dial Number icon again to redial)



- Inner Call : If multi Monitors are installed in one user, select and press the Inner Call item, the other Monitors will ring at the same time, whichever Monitor answers the call, conversation is started, and the other monitors will stop ringing and the screen will shut off at the same time.
- Direct Dial Guard unit : A Monitor can be assigned as Guard Unit Monitor; when the Guard Unit Monitor answers the call, conversation with the guard person is started..

4. Basic Setup Instructions


 




Ring Tone Setting

- Touch  User Setup icon on main menu page to enter call tone setting screen, touch Door station call tone/intercom call tone/door bell call tone, 12 pieces ring tones will be displayed, Choose a ring tone that you want, then touch  icon to save and exit, the ring tone will be performed. or touch  icon to cancel and exit.






 

 
 
 


Ring Volume Setting

Ring Volume

- You can set a ring volume for day time, 6:00 AM~18:00 PM is the day time by default, enter main menu page, then touch  touch User Setup icon to enter next page, and then touch  Ring Volume icon to enter Ring Volume page, Use   icon to tune up/down the volume. then touch  icon to save and exit, or touch  icon to cancel and exit.



 



Night Ring Volume

- You can activate a ring volume for night time, 18:00 PM~6:00 AM is the night time by default, if you don't want to be disturbed at night, you can set the volume to 0. Enter main menu page, touch  User Setup icon to enter next page, then touch  Night Ring Volume icon to enter Night Ring Volume page, Use   icon to tune up/down the volume. After setting a value you want, you should touch  Ring Volume icon to activate the setting, after that the  Ring Volume icon will change to  Night Ring Volume icon. then touch  icon to save and exit, night ring volume will be performed. or touch  icon to cancel and exit.
Note: touch  Night Ring Volume icon again, you can cancel the night ring volume setting.




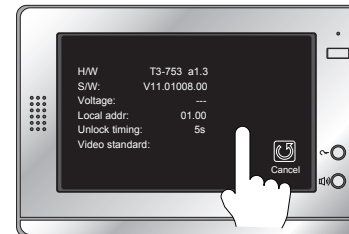
Monitor Time Setting



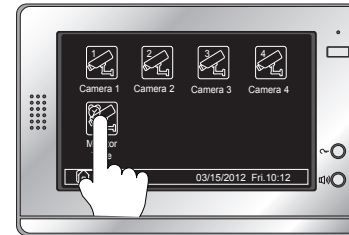

- Enter main menu page, then touch  Manual Monitor icon to enter next page, then press  Monitor Time icon to enter monitor time setting page.
- Input digits by pressing the digital keypad, and press * icon to change the setting location, and press # icon to save. Settings will be performed immediately, press  icon to return last page.



Unlock Parameter Setting



 
 
- Enter main menu page, then Touch  About icon to enter next page, and then touch the screen anywhere and hold for 3s to enter next menu



- Touch  Installer setup icon, a digit keypad and installation setting will be shown on screen.
- Input code number by touching the digit keypad. According to the left instructions, 8010 and 8011 are used to set the unlock mode (0 and 1). 8021~8029 are used to set the unlock time (1s~9s). Use  to cancel the input, and use  to save the setting. Touch  icon to return last page.



Screen Setting



- When the Monitor is in monitoring or talking state, Press  Adjust icon to enter screen setting mode. Touch any item you want, then touch   to decrease or increase the value. Settings will be performed immediately. Press  icon to exit out the page.



Restore to Default

- The restore to default function allows the user to recover the settings to factory setting. Note that the restore to default operation will not change the time setting and the data on built-in memory or SD card.



Enter main menu page, then touch  User Setup icon to enter the setting page, press Restore to default item, the default settings will be loaded. Press  Home icon to return to home screen page.


5. Built-in Memory and SD Card

This Monitor has been equipped with a built-in memory (about 120 MB) together with a SD card reader. Maximum 16 GB SD card can be supported.






- The monitor can play photos and pictures.
- Photo frame function, each photo playing will last 5 seconds, More pictures in the SD card, longer time for triggering the function, 800 pictures is supported in inner memory. With 2G SD card, more than 30000 pictures can be supported.
- Must use T-views album software tool to transform the JPG format photos taken by digital camera to TVS format photos that can be viewed on Monitor.
- The captured pictures will be saved in a folder named by date, note that the pictures captured every day will be saved in different folders which automatically generated every day.
- The captured pictures in the built-in memory can be copied to the SD card, and you should use T-views memo software tool to convert the pictures to JPG format that can be seen on the computer. (select the pictures (press Ctrl+A to select all) -> click the right key of the mouse -> choose transfer selected to JPG item -> save the pictures on computer)
- When the built-in memory is full, the oldest picture will be deleted to make room for new records.
- The built-in memory can be formatted by the Monitor, but SD card cannot, you should format the SD card on computer.
- Avoid to plug in/out the SD card when the monitor is under operation.
- Playing will be interrupted by the calling from outdoor station.

Picture Recording

- Both Auto-Recording and Manual-Recording are available. and Auto-Recording is default. If receive a Call , after 3s, the monitor will record automatically. or you can touch  Capture icon to record the visitor's image manually.












Record times Setting

- You can setup Memo Options to choose 1/4/8 pictures memo. If 4/8 was chosen, you will have 4/8 shots for each recording operation, and every 1.5 seconds capture a picture. Touch  Multi Media icon on main menu to enter next page, then touch  Memory Options icon, a keypad will be shown on the screen, you can only set the record times for 1/4/8 by touching the digital keypad. touching other digits are invalid .and press # icon to save. Settings will be performed immediately, press  icon to return last page.



Picture Playback

- Touch  Memory Playback icon on main menu, 4 pictures will be displayed in the memo for each page. you can touch  or  to enter last or next picture memo, or touch  icon to delete all pictures. And you can zoom the picture on full screen by touch  icon , on full screen mode, touch   icon to preview last/next picture. or you can touch  icon to delete the picture you are previewing. press  icon to return home screen page.

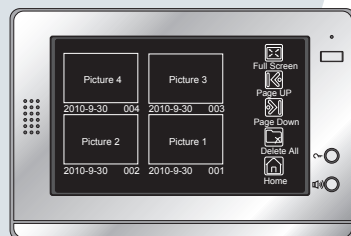






Photo Playing

- Touch  Album icon on main menu to play the photos (must plug in SD card). it can be played both manually and automatically, use your fingers to slide right or left on screen to play last/next photo.

Playing time setting

- Touch  Multi Media icon on main menu to enter next page, then touch  Album Options icon, a keypad will be shown on the screen, then you can set the playing time by touching the digital keypad to input digitals and press * icon to change the location, and press # icon to save. Settings will be performed immediately, press  icon to return last page .



6.Specification

- Power Supply : DC 24V (supplied by Adaptor)
- Power Consumption : Standby 3W; Working status 17W
- Monitor Screen : 10 Inch color TFT-LCD
- Video signal : 1Vp-p, 75Ω, CCIR standard
- Display Resolution : 800*3(RGB)*480 pixels
- Built-in Memory : 120 MB
- Picture Memo : 800pcs(inner memory), >30000pcs(2G SD card)
- Monitor Dimension : 205(H)×305(W)×32(D)mm